

# SpaceControl User Manual

Updated March 24, 2022



**SpaceControl** is a miniature key fob with accidental click protection. It allows to set the Ajax security system in the armed, night or disarmed mode, as well as switch on an alarm.


As it is the two-way communication, you will know whether the system has received the SpaceControl command.

Operating as part of the Ajax security system, the key fob is connected to the hub via the protected Jeweller protocol. In addition, the key fob can be used to control any third party security central unit through the uartBridge or ocBridge Plus integration module.

The key fob is set up through the iOS and Android-based mobile app for smartphones.

[Buy key fob SpaceControl](#)

# Functional elements

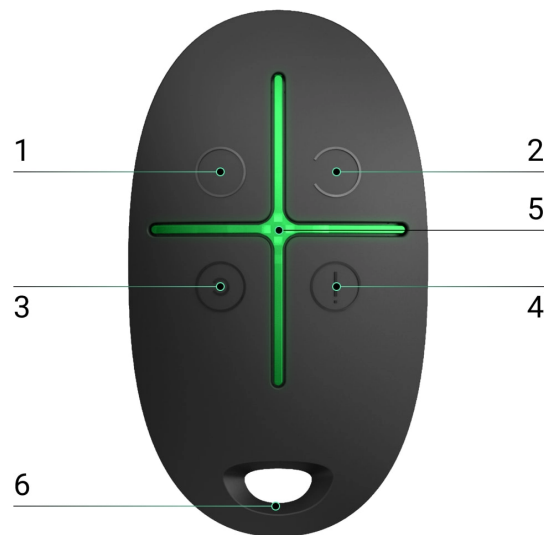

1. System arming button
2. System disarming button
3. Night mode button
4. Panic button (activates the alarm)
5. Light indicators
6. The hole for attaching the key fob



Buttons can be assigned when using a key fob with hub and Ajax uartBridge. At the moment, the feature of modification of commands (and deactivation) of the key fob buttons when using with the Ajax hub is not available.





## Using the key fob


Maximum connection distance between the key fob and the hub – 1,300 meters. This distance is reduced by walls, inserted floors and any objects hindering the signal transmission.

SpaceControl operates only with one security system (Ajax or third-party system via the integration module). If you connect the key fob to a new security system, it

will cease to interact with the previous system. However, the key fob will not be automatically deleted from the list of devices of the hub.

### The key fob can:

- **Arm the system** – press the button  once
- **Turn on the night mode** – press the button  once
- **Disarm the system** – press the button  once
- **Switch on an alarm** – press the button  once


To turn off the actuated security system (siren), press the disarming mode button  on the keyfob.



Accidental click protection is available on the SpaceControl with **firmware version 5.54.1.0 and higher**.

## Operational Indication

The key fob reports its status only after any button is pressed.

Type and color of indication of the key fob display depends on the firmware version of the device. You can find out the firmware version in the **Ajax application** → **Devices**  → **key fob**. Information about the firmware version is displayed at the very bottom.

Indication	Event
4 green key fob LEDs blink 6 times	The key fob is not registered with any security system
Two green LEDs next to the pressed button light up once	The key fob command has been sent over to the security system
<b>Firmware version 3.16 and lower</b> The LEDs next to the pressed button quickly blink green 4 times	The command has not been delivered as the security system is too far away and cannot receive the command

<p><b>Firmware version 3.18 and higher</b></p> <p>The central LED lights up red briefly</p>	
<p>Two LEDs next to the button light up green twice. Then 4 key fob LEDs blink green 6 times</p>	<p>The key fob has been removed from the security system devices</p>
<p>The central LED lights up green for a few seconds</p>	<p>Linking a key fob to the security system</p>
<p><b>Firmware version 3.18 and higher</b></p> <p>The central LED lights up green for approximately half a second</p>	<p>The system has executed the key fob command</p>
<p><b>Firmware version 3.18 and higher</b></p> <p>The central LED lights up red for approximately half a second</p>	<p>The system has not executed the key fob command – integrity verification is enabled in the system and one of the devices is faulty</p> <p><u><b>What is system integrity check?</b></u></p>
<p><b>Firmware version 3.16 and lower</b></p> <p>After the main indication, the central LED lights up green once and gradually goes out</p> <p><b>Firmware version 3.18 and higher</b></p> <p>After the main indication, the central LED lights up red once and goes out gradually</p>	<p>The key fob battery needs replacement. In this case, the key fob commands are delivered to the security system.</p> <p><u><b>Battery replacement</b></u></p>
<p><b>Firmware version 3.16 and lower</b></p> <p>Continuous short flashes of green light</p> <p><b>Firmware version from 3.18 to 3.52</b></p> <p>Continuous short flashes of red when a key fob with firmware version from 3.18 to 3.52 is used.</p> <p>Key fobs with <b>firmware version 3.53 and latest</b> do not function when the battery charge level is unacceptably low, do not communicate commands to the hub, and do not notify with LED indication</p>	<p>The battery charge level is unacceptably low. The battery needs replacement.</p> <p>In this operation mode, the key fob commands are not delivered to the security system.</p> <p><u><b>Battery replacement</b></u></p>

# Connecting the key fob to the Ajax Security System

## Connection to hub



### Before starting connection:

1. Following the hub instruction recommendations, install the [Ajax application](#) on your smartphone. Create an account, add the hub to the application, and create at least one room.
2. Go to the Ajax application.
3. Switch on the hub and check the internet connection (via Ethernet cable and/or GSM network).
4. Ensure that the hub is disarmed and does not start updates by checking its status in the mobile application.



Only users with administrative privileges can add the device to the hub.

### How to connect key fob to hub:

1. Select the **Add Device** option in the Ajax application.
2. Name the device, scan/write manually the **QR Code** (located inside the body, on the battery fixture and packaging), and select the location room.
3. Select **Add** – the countdown will begin.
4. Simultaneously press the button for armed mode  and the panic button  – the key fob will blink with the central LED. For the detection and interfacing to occur, the key fob should be located within the coverage area of the wireless network of the hub (at a single protected object).

Request for connection to the hub is transmitted for a short time at the time of switching on the device.

The key fob connected to the hub will appear in the list of devices of the hub in the application.

## Connecting the key fob to Third Party Security Systems

To connect the key fob to a third party security central unit using the [Ajax uartBridge](#) or [Ajax ocBridge Plus](#) integration module, follow the recommendations in the manual of the respective device.

## States

1. Devices 

2. SpaceControl


Parameter	Value
Battery Charge	<p>Battery level of the device. Two states available:</p> <ul style="list-style-type: none"><li>• OK</li><li>• Battery discharged</li></ul> <p><a href="#">How battery charge is displayed in Ajax apps</a></p>
Accidental click protection	<p>Indicates the method of protection against accidental clicks:</p> <ul style="list-style-type: none"><li>• Off</li><li>• Long press</li><li>• Double click</li></ul> <p>The function is available on key fobs with <b>firmware version 5.54.1.0 and higher</b></p>
The status of the connection with the ReX range extender	<p>Displayed if the key fob is working through a <a href="#">radio signal range extender</a></p>


Panic	Panic button status
Temporary Deactivation	Displays the status of the device: active or completely disabled by the user
Firmware	Firmware version of the key fob. It is not possible to change the firmware
Device ID	Device identifier

## Setting Up the key fob

1. Devices 

2. SpaceControl

3. Settings 

Setting	Value
First field	Device name, can be edited
Room	Selecting the virtual room to which the device is assigned
Arming/Disarming Permission	<p>Selection of a security group that the key fob manages. You can select <b>All groups</b> or a single group.</p> <p> <i>Configuration is available only after group mode activation</i></p>
User	<p>Selection key fob user.</p> <p><b>Key fob is unassigned:</b></p> <ul style="list-style-type: none"> <li>• Key fob events are sent to Ajax apps under the key fob name.</li> <li>• Security mode management rights are determined by key fob settings.</li> </ul> <p><b>Key fob is assigned to user:</b></p> <ul style="list-style-type: none"> <li>• Key fob events are sent to Ajax apps under the user's name.</li> </ul>

	<ul style="list-style-type: none"> <li>The key fob has the same security mode management rights as the user.</li> </ul>
Panic	Turning on/off the panic button
Accidental click protection	<p>Choosing the method of protection against accidental clicks:</p> <ul style="list-style-type: none"> <li><b>Off</b> – protection is turned off</li> <li><b>Long press</b> – in order for the key fob to transmit the command to the hub, you should hold the button down for more than 1.5 seconds</li> <li><b>Double press</b> – in order for the key fob to transmit the command to the hub, you should double-press on the button with a pause of no more than 0.5 seconds</li> </ul> <p>The function is available on key fobs with <b>firmware version 5.54.1.0 and higher</b></p>
Alert with a siren if panic button is pressed	If active, <a href="#">Ajax sirens</a> are activated after panic button pressing
User Guide	Opens the device User Manual
Temporary Deactivation	<p>Allows a user to deactivate the device without deleting it from the system. The device will not execute system commands and participate in automation scenarios. The panic button of a deactivated device is disabled</p> <p><a href="#">Learn more about device temporary deactivation</a></p>
Unpair Device	Disconnects the device from the hub and deletes its settings

## Key fob Maintenance and Battery Replacement

When cleaning the key fob body use any means suitable for equipment maintenance.



Do not use for cleaning SpaceControl any substances containing alcohol, acetone, gasoline and other active solvents.

The pre-installed battery provides up to 5 years of operation of the key fob during normal use (one arming and disarming of the security system per day). More frequent use can reduce battery life. You can check battery level at any time in the Ajax app.



Keep new and used batteries away from children. Do not ingest battery, Chemical Burn Hazard.

The pre-installed battery is sensitive to low temperatures and if the key fob is significantly cooled, the battery level indicator in the app may show incorrect values until the key fob gets warm.



The value of the battery level is not updated regularly, but only after pressing one of the buttons at the key fob.

When the battery is discharged, the user will receive a notification in the Ajax app, and the key fob LED will slowly light up and go out red each time the button is pressed (key fobs with **firmware version 3.16 and lower** light up green).

### How long Ajax devices operate on batteries, and what affects this

#### Battery replacement

## Tech Specs

Number of buttons	4
Panic button	Yes
Accidental click protection	Available with the firmware version 5.54.1.0 and higher. Manufacture date from March 19, 2020

	<a href="#"><u>How to find out the manufacture date of a detector or device</u></a>
Radio communication protocol	Jeweller  <a href="#"><u>Learn more</u></a>
Radio frequency band	866.0 – 866.5 MHz 868.0 – 868.6 MHz 868.7 – 869.2 MHz 905.0 – 926.5 MHz 915.85 – 926.5 MHz 921.0 – 922.0 MHz Depends on the region of sale.
Compatibility	Operates with all Ajax <a href="#"><u>hubs</u></a> , <a href="#"><u>radio signal range extenders</u></a> , <a href="#"><u>ocBridge Plus</u></a> , <a href="#"><u>uartBridge</u></a>
Effective radiated power	6.01 dBm / 3.99 mW (limit 20 mW)
Modulation of the radiosignal	GFSK
Radio signal range	Up to 1,300 m (any obstacles absent)
Power supply	1 battery CR2032A, 3 V
Service life from the battery	Up to 5 years (depending on the usage frequency)
Operating temperature range	From -25°C to +50°C
Operating humidity	Up to 95%
Overall dimensions	65 × 37 × 10 mm
Weight	13 g
Service life	10 years
Certification	Security Grade 2, Environmental Class III in conformity with the requirements of EN 50131-1, EN 50131-3, EN 50131-5-3

### [Compliance with standards](#)

**Complete Set**

1. SpaceControl
2. Battery CR2032 (pre-installed)
3. Quick Start Guide

## Warranty

Warranty for the “AJAX SYSTEMS MANUFACTURING” LIMITED LIABILITY COMPANY products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service – in half of the cases, technical issues can be solved remotely!

[The full text of the warranty](#)

[User Agreement](#)

Technical support: [support@ajax.systems](mailto:support@ajax.systems)

Subscribe to the newsletter about safe life. No spam

Email

**Subscribe**